


1005

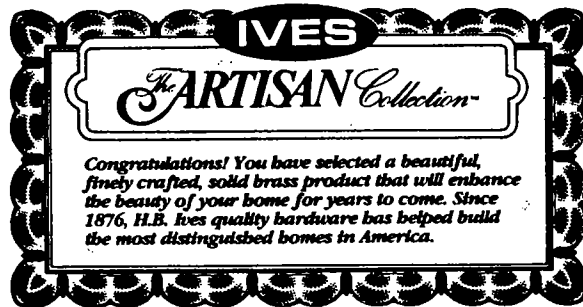

BEADED PULL 3"

FOR USE ON DRAWERS, CABINET DOORS, AND HANDLE APPLICATIONS. BASE WASHERS ARE INCLUDED.

INSTALLATION INSTRUCTIONS


TOOLS REQUIRED: Drill, 3/16" drill bit, awl, regular screwdriver and pencil.

FOR DRAWER APPLICATION —

1. Position and mark screw holes 3" from center to center with awl. When two pulls are required, space at equal distance from edge of drawer.
2. Drill holes completely through drawer and insert screws. Place base washers on outside and secure (see illustration).

FOR CABINET DOOR APPLICATION —

1. Place in vertical position (approximately 1/3rd from top or bottom of door and 1"-2" from door edge). Mark, drill and secure.

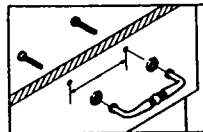

MAINTENANCE INSTRUCTIONS

H.B. Ives Solid Brass products have a clear, protective lacquer coating which helps prevent discoloration. Do not use abrasive waxes or cleaners.

ASK FOR OTHER FINE DECORATIVE HARDWARE BY H.B. IVES



BEADED PULL 3" C133 B3 BRT
 MADE IN U.S.A.