



PM-Series

Functions: PM060, PM071, PM457




ALLEGION™

Trim

Sectional

Escutcheon

Left Hand (LH) Door Shown

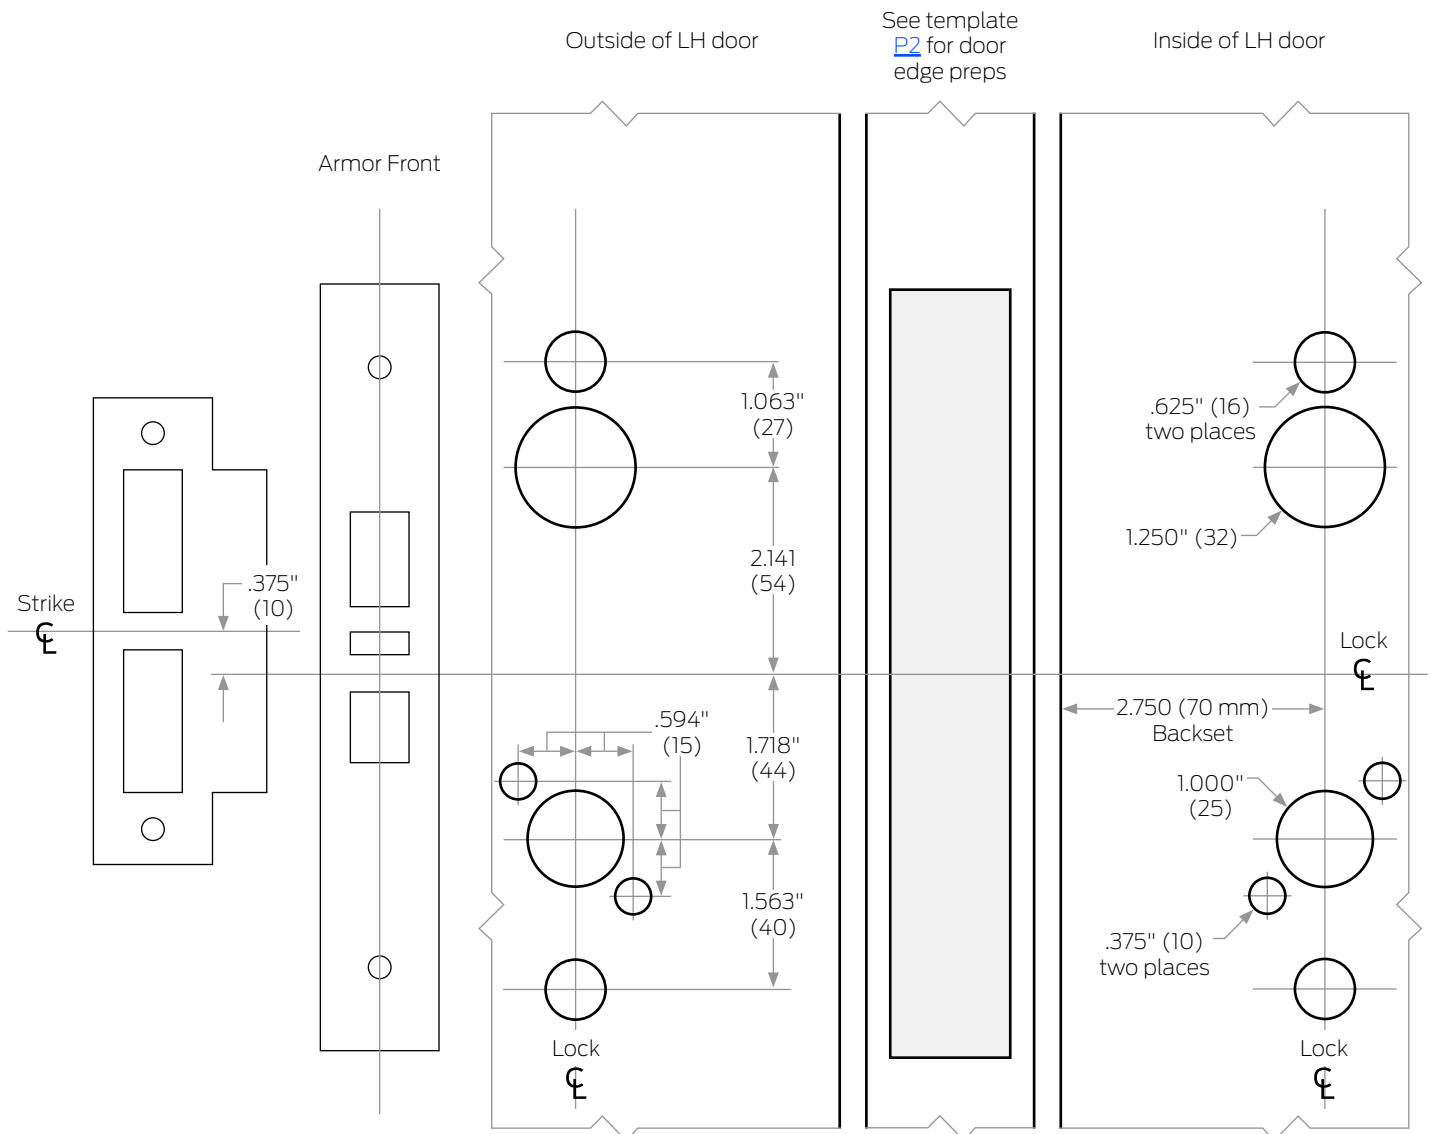

Refer to Template [P1](#) for case and strike dimensions and if applicable information to prepare the door for wire routing. Armor front deadbolt, auxiliary latch and latchbolt holes shown for dimensional purposes only. Use door edge measurements for door preparation.

Dimensions shown in parentheses () are in millimeters.

Drawing not to scale.

Door preparation template

P114