48283045

996-FER

VON DUPRIN

Forced Entry Resistant Trim

Installation Instructions

1. Prepare door for exit device. See exit device instructions for line X-X, exit device center line, and exit device side door cutouts.
2. Prepare door for trim:
   a. Transfer line X-X from exit device side of door to trim side. Use extra care if door is beveled. Be sure line X-X is parallel to edge of door.
   b. Locate and prepare all holes as shown.
3. Install exit device and trim. Use 1-3/8” screws for 1-3/4” door, 1-7/8” screws for 2” and 2-1/4” door (cut down screws for 2” door if necessary).

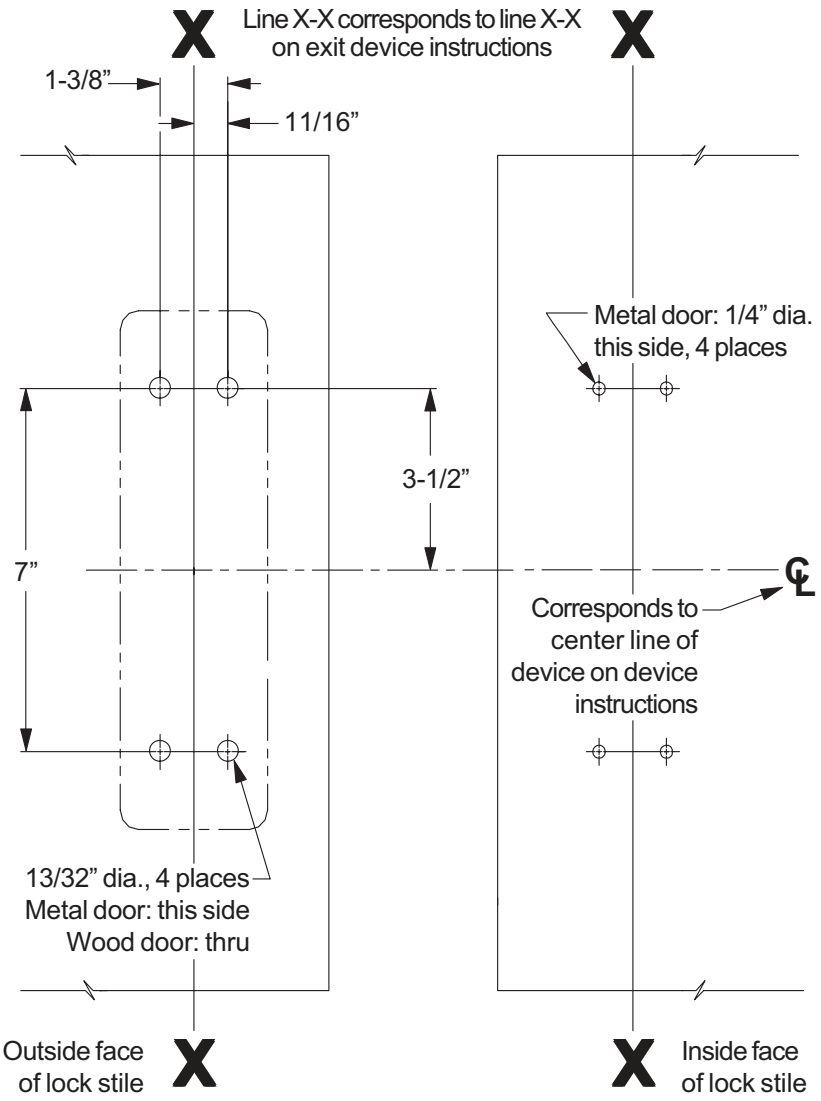

LHR shown, RHR opposite

Customer Service

1-877-671-7011 www.allegion.com/us

ALLEGION

© Allegion 2025
Printed in U.S.A.

48283045 Rev. 2/25-a