941913-00

GBK

VON DUPRIN

Glass Bead Shims for 22-F, 2227-F, 78-F, 7827-F, 98-F/99-F, 9827-F/9927-F, and XP98-F/XP99-F

Installation Instructions

1 Prepare inside face of door per device installation instructions.

2 Insert shims between the device and door (Figure 1).

ⓘ **Note: Shims are handed and flipped for RH or LH application.**

3 Secure device and strike hook with screws provided in this kit, see chart below.

	Screw size & type	QTY	Application	1-3/4" door	2-1/4" door
A	#10-24 x 1-1/8" PPHMS	4	Surface	✔	✔
	#10-24 x 1-1/8" PPHMS	4	Sex bolts	✔	
	#10-24 x 1-1/2" PPHMS	4	990 trims	✔	
	#10-24 x 1-3/4" PPHMS	4	Sex bolts		✔
	#10-24 x 2" PPHMS	4	990 trims		✔
B	#10-24 x 1" PPHMS	2	Surface - All metal doors	✔	✔
	#10-16 x 1-1/4" PPHSMS	2	Surface - All solid wood doors	✔	✔
	#10-24 x 1" PPHMS	2	Sex bolts	✔	
	#10-24 x 1-1/2" PPHMS	2	Sex bolts		✔

22-F & 2227-F

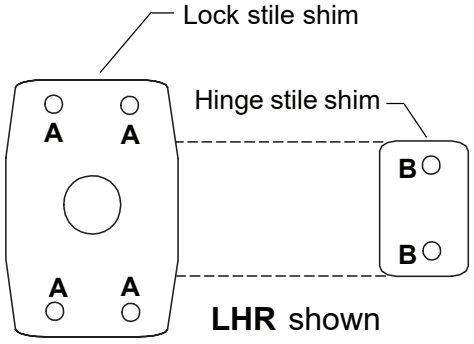

LHR shown
RHR opposite

Rod Guide Shim

No special screws required

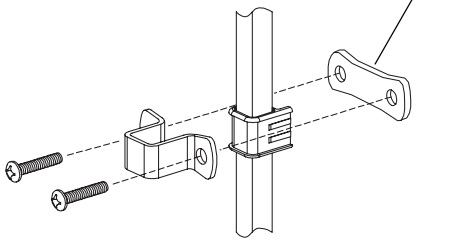

78-F, 7827-F, 98-F/99-F, 9827-F/9927-F & XP98-F/XP99-F

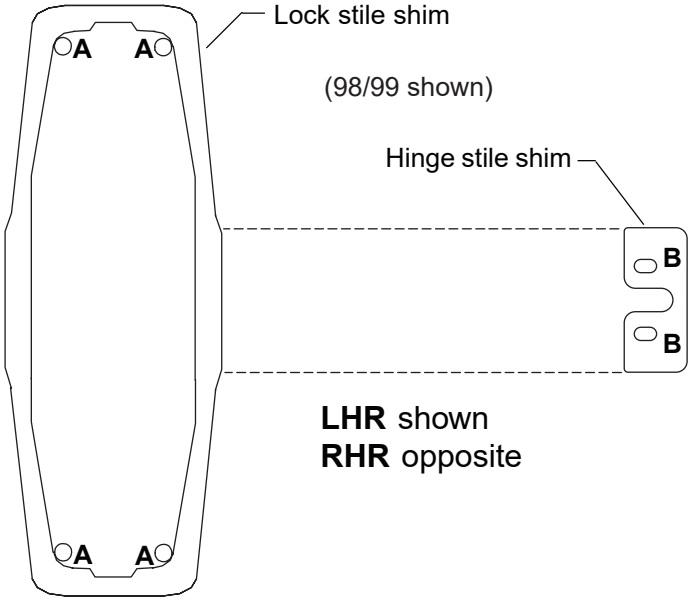

LHR shown
RHR opposite

Customer Service

1-877-671-7011 www.allegion.com/us

ALLEGION

© Allegion 2024
Printed in U.S.A.
941913-00 Rev. 05/24-c